




Curves



Curve the appeal of your wall...

Curve details are often required for specific sites and can be specified by designers and engineers. Correct construction and professional completion of these wall details greatly enhances the visual appeal of the finished project and avoids the time and costs associated with improper installation. This document provides illustrated step-by-step instructions for building convex and concave curves.



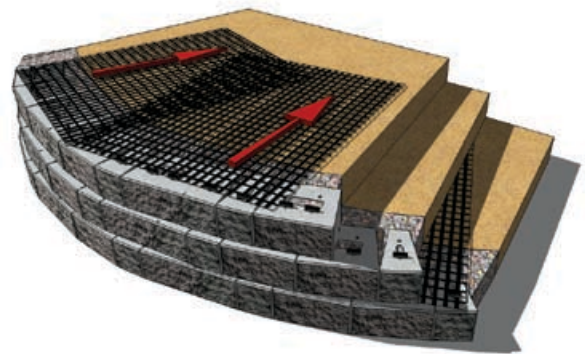


Concave/Inside Curves

> > > STEP 1

CONCAVE FIRST COURSE


- If possible, start building a curve from the center and work left and right through the curve
- Use **PVC Flex Pipes** to create smooth and accurate **Convex** curves
- Use the back of the unit for alignment
- **Convex** curves have a slight increase in batter or setback to the standard 1/2" or vertical wall
- The taller the wall the larger the **Convex** first course needs to be. The radius of each additional course will be slightly smaller than the lower course

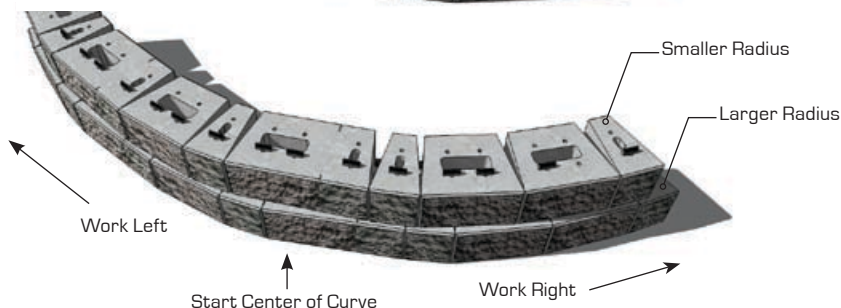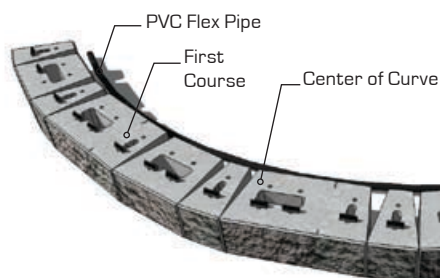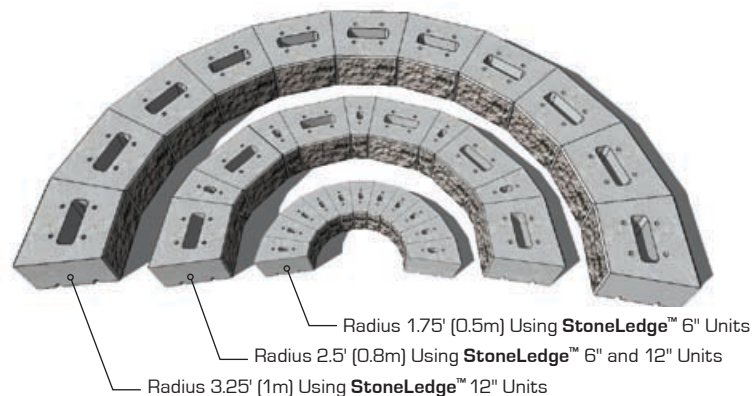

> > > STEP 2

CONCAVE GEOGRID CURVE

- Each **Geogrid** length should be laid perpendicularly to the wall face
- **Geogrid** should not overlap on the **StoneLedge™** units
- **Correct geogrid orientation, strength and length is crucial to the success of the wall project**

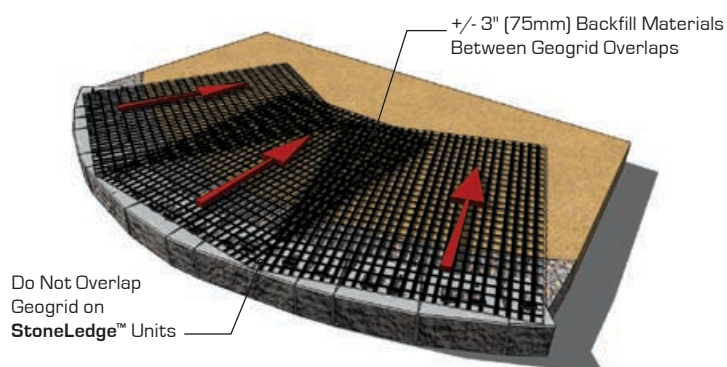


Convex/Outside Curves

> > > STEP 1

CONVEX FIRST COURSE

- If possible, start building a curve from the center and work left and right through the curve
- Use **PVC Flex Pipes** to create smooth and accurate **Concave** curves
- Use the back of the unit for alignment
- **Concave** curves have a slight decrease in batter or setback to the standard 1/2" or vertical wall
- The taller the wall the smaller the **Concave** first course needs to be. The radius of each additional course will be slightly larger than the lower course

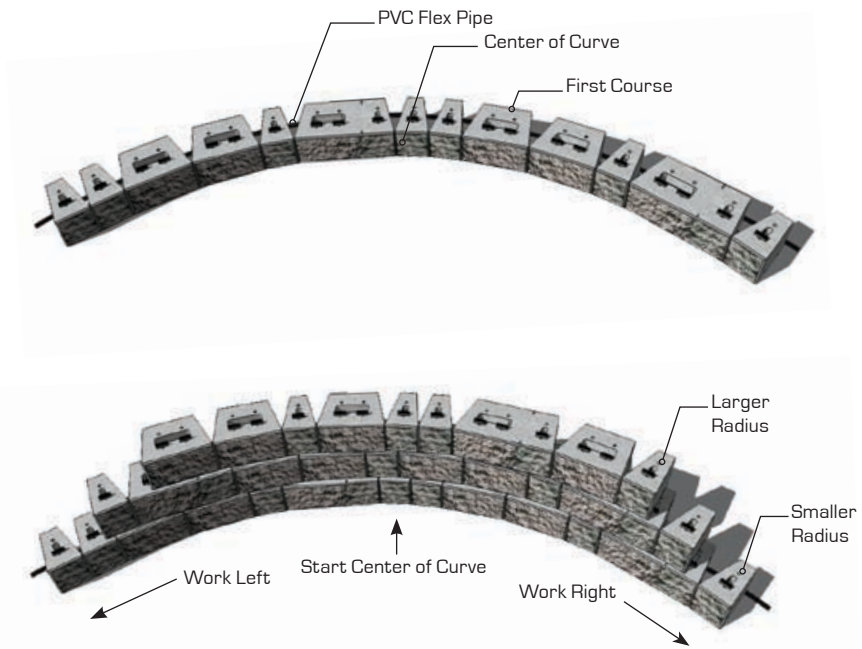

> > > STEP 2

CONVEX GEOGRID CURVE

- Each **Geogrid** length should be laid perpendicularly to the wall face
- **Geogrid** should not overlap on the **Stoneledge™** units
- To ensure 100% coverage, place a second layer of **Geogrid** centered to the unreinforced triangle zone one course above the main **Geogrid** layer
- **Correct geogrid orientation, strength and length is crucial to the success of the wall project**

